

## 1 Set up InTempConnect™ accounts.

**Note:** If you are using the logger with the InTemp app only, see the Standalone User Setup section on the back.

- Go to [intempconnect.com](http://intempconnect.com) and follow the prompts to set up an administrator account. You'll receive an email to activate the account.
- Log in to the account at [intempconnect.com](http://intempconnect.com) and add users to your InTemp account. Click Settings and then the Users tab. Click Add and enter the email address and first and last name of the user. **Note:** If your organization is already using InTempConnect, contact your administrator to receive a user name and password to the account.
- New users will receive an email to activate their user accounts.

## 2 Download the InTemp app and log in.

- Download InTemp to a phone or tablet.
- Open the app and enable Bluetooth® in the device settings if prompted.
- Log in with your InTempConnect user credentials.



## 3 Configure the logger.

**Important:** CX501 and CX502 loggers cannot be restarted once logging begins. Do not continue with these steps until you are ready to use these loggers.

- Press the button on the logger to wake it up.
- From the Loggers screen in the InTemp app, find the logger in the list and tap it to connect to it. If the logger does not appear, make sure it is within range of your device.
- Once connected, tap Configure. Swipe left and right to select one of the preset logger configurations. Type a deployment name. Tap Start to load the selected configuration to the logger. **Note:** To set up a custom configuration, tap the Settings icon and tap CX500 Logger Configurations.

## 4 Deploy and Start the Logger.

**Important:** Reminder, CX501 and CX502 loggers cannot be restarted once logging begins. Do not continue with this step until you are ready to use these loggers.

Deploy the logger to the location where you will be monitoring the temperature. Press the button on the logger when you want logging to begin (or if you chose a custom configuration, logging will begin based on the settings you selected).

### Standalone User Setup:

If you plan to use the logger with the InTemp app only and not use InTempConnect, download the InTemp app from the App Store® or Google Play™ to a phone or tablet. Open the app and create a local user account. Follow steps 3 through 5 in this quick start. Note that the reports downloaded from the logger will only be available in the app for viewing and sharing.

## 5 Download the Logger.

Using the InTemp app, connect to the logger and tap Download. A report is saved in the app and also uploaded to InTempConnect. (If you logged in as a local user in the app, then reports are not available in InTempConnect.) Tap the Reports icon in the app to view and share downloaded reports. Log in to InTempConnect to customize and view reports.



For more information on using the logger and the InTemp system, go to [www.intempconnect.com/help](http://www.intempconnect.com/help) or scan the code at left.

**WARNING:** Do not cut open, incinerate, heat above 85°C (185°F), or recharge the lithium battery. The battery may explode if the logger is exposed to extreme heat or conditions that could damage or destroy the battery case. Do not dispose of the logger or battery in fire. Do not expose the contents of the battery to water. Dispose of the battery according to local regulations for lithium batteries.